


# IGNITION SYSTEM

EAS27090

## IGNITION SYSTEM

EAS27110

## CIRCUIT DIAGRAM

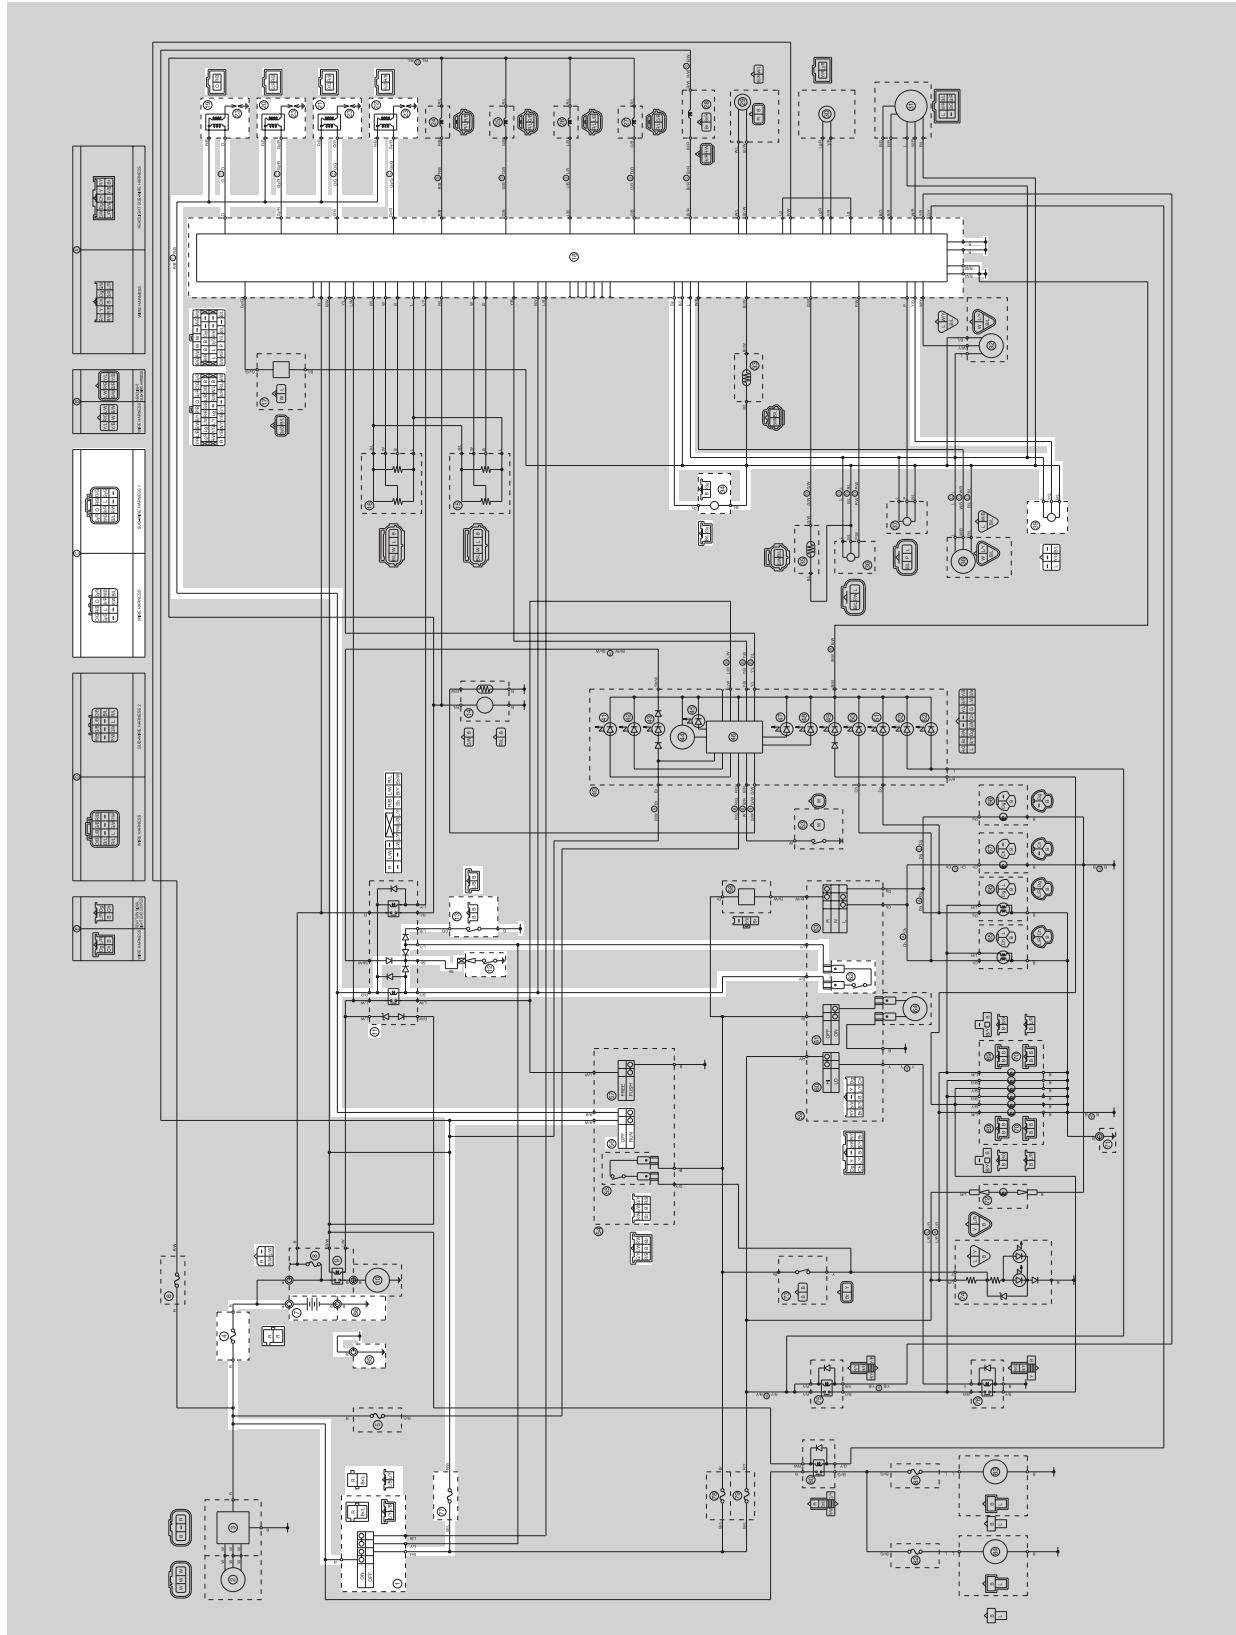

## **IGNITION SYSTEM**

---

1. Main switch
4. Main fuse
7. Battery
11. Starting circuit cut-off relay
12. Neutral switch
13. Sidestand switch
18. ECU (engine control unit)
19. Ignition coil #1
20. Ignition coil #2
21. Ignition coil #3
22. Ignition coil #4
23. Spark plug
34. Crankshaft position sensor
39. Lean angle sensor
56. Engine stop switch
62. Clutch switch
77. Ignition fuse
85. Ground
86. Battery negative lead